SAMSUNG

# Washing Machine
# Owner's Instructions

## WD8602R8(W/V/C/S/R)

Register your product at
www.samsung.com/global/register

Code No.: DC68-02410Z_EN

WD8602R8-02410Z_EN.indd 1 2009-01-09 ¿ÀÈÄ 6:20:27

# Features

**1. Child Lock**
The Child Lock function keeps curious little hands out of the washer. This safety feature ensures, that children do not toy with the operation of the washer. It also alerts you when it is activated.

**2. Delay End**
This function enables uses to delay the washing machine's starting time for up to 24 hours.

**3. Calm Wash**
We have a wash cycle that is so quiet you can do laundry while you sleep. The spin cycle is whisper quiet as it drains away water.

**4. Less Ironing**
Less ironing is needed as Samsung's Carefreewash safely cleans your soft, delicate cloths and easy-care fabrics. Developed by Samsung's globally recognized digital process technology, the Less Iron function is a specialized laundry program that will help to reduce wrinkles on your delicate garments, freeing up the time you would have spent on ironing.

**5. Delicates & Wool Program**
Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

**6. Air Wash**
The Air Wash system deodorizes unpleasant smells and sterilizes 'bacteria' and mites in the laundry that cannot be eliminated through a conventional washing system, a benefit of its unique air-washing mechanism.
- Air-washable : Woolen coats, cotton/down jumpers, sweaters, suits, pillows, cushions, needlework dolls
- Not applicable : leather, silk, velvet, electric blankets, other dirty laundry



WD8602R8-02410Z_EN.indd 3 2009-01-09 ¿ÀÈÄ 6:20:27

# Safety Precautions

Congratulations on your purchase of this Samsung washing machine. These Owner's Instructions contain valuable information on the installation, use, and care of this appliance. Please take the time to read these instructions so that you can take full advantage of the washing machine's features and enjoy this appliance for many years to come.

## Before using the appliance

- Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.
- The appliance is designed for home use only.
- Make sure that water and electrical connections are made by qualified technicians, observing the manufacturer's instructions (see "Installing the Washing Machine") and local safety regulations.
- All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See "Removing the shipping bolts".
- Before washing clothes for the first time, you must run a complete cycle without clothes. See "Washing for the first time".

## Safety instructions

- Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet or set the ⏻ (On/Off) button to Off.
- Make sure that the pockets of all clothing to be washed are empty. Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.
- Always unplug the appliance and turn off the water after use.
- Before you open the door of the appliance, check that the water has drained. Do not open the door if you can still see water.
- Pets and small children may climb into the appliance. Check the appliance before each use.
- The glass door becomes very hot during the washing cycle. Keep children away from the appliance while it is in use.
- Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.
- If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance should only be serviced by an authorized service center, and only genuine spare parts should be used.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- If this appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture. Additionally, the cord extension set or electrical portable out let device must be of a current rating suitable for the appliance.
- This appliance has to be connected to the plug endurable to proper power consumption.
- This appliance has to be positioned so that the plug is accessible after installation.
- Do not use processed water containing oil, cream or lotion, which is usually found in skin-care shops or massage clinics.
  - Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.
- A stainless washing tube does not usually rust. However if some metal such as a hair pin is left in the tube for an extended time, the tube could rust.
  - Do not leave water or bleach containing chlorine in the tube for an extended period of time.
  - Do not regularly use or leave water containing iron in the tube for an extended period of time.

  If rust starts appearing on the surface of the tube, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)
- For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.
- Use the new hose-sets and old hose-sets should not be reused.

SAVE THESE INSTRUCTIONS

# Table of Contents

**Safety Precautions** . . . . . **inside cover**

**Installing the Washing Machine.** . . . . . **A-1**
- Unpacking the washing machine . . . . . A-1
- Overview of the washing machine . . . . . A-1
- Selecting a location. . . . . A-2
- Adjusting the leveling feet . . . . . A-2
- Removing the shipping bolts . . . . . A-2
- Connecting the water supply hose . . . . . A-3
- Positioning the drain hose . . . . . A-4

**Washing a Load of Laundry** . . . . . **B-1**
- Overview of the control panel . . . . . B-1
- Washing clothes using Fuzzy Logic . . . . . B-3
- Washing clothes manually . . . . . B-4
- Using Delay End . . . . . B-4
- Washing for the first time. . . . . B-5
- Putting detergent in the washing machine . . . . . B-5
- Washing tips and hints . . . . . B-6

**Maintaining the Washing Machine** . . . . . **C-1**
- Draining the washing machine in an emergency . . . . . C-1
- Repairing a frozen washing machine. . . . . C-1
- Cleaning the exterior . . . . . C-1
- Cleaning the detergent drawer and recess . . . . . C-2
- Cleaning the debris filter . . . . . C-2
- Cleaning the water hose mesh filter . . . . . C-3

**Troubleshooting** . . . . . **D-1**
- Problems and solutions . . . . . D-1
- Understanding error messages. . . . . D-1

**Programme Chart** . . . . . **E-1**

**Appendix** . . . . . **F-1**
- Fabric care chart . . . . . F-1
- Electrical warnings . . . . . F-1
- Protecting the environment . . . . . F-2
- Declaration of conformity . . . . . F-2
- Specification . . . . . F-2



WD8602R8-02410Z_EN.indd 5 2009-01-09 ¿ÀÈÄ 6:20:28

# Installing the Washing Machine

## Unpacking the washing machine

Unpack your washing machine and inspect it for shipping damage. Also make sure that you have received all of the items shown below. If the washing machine was damaged during shipping or you do not have all of the items, contact your Samsung dealer immediately.

## Overview of the washing machine

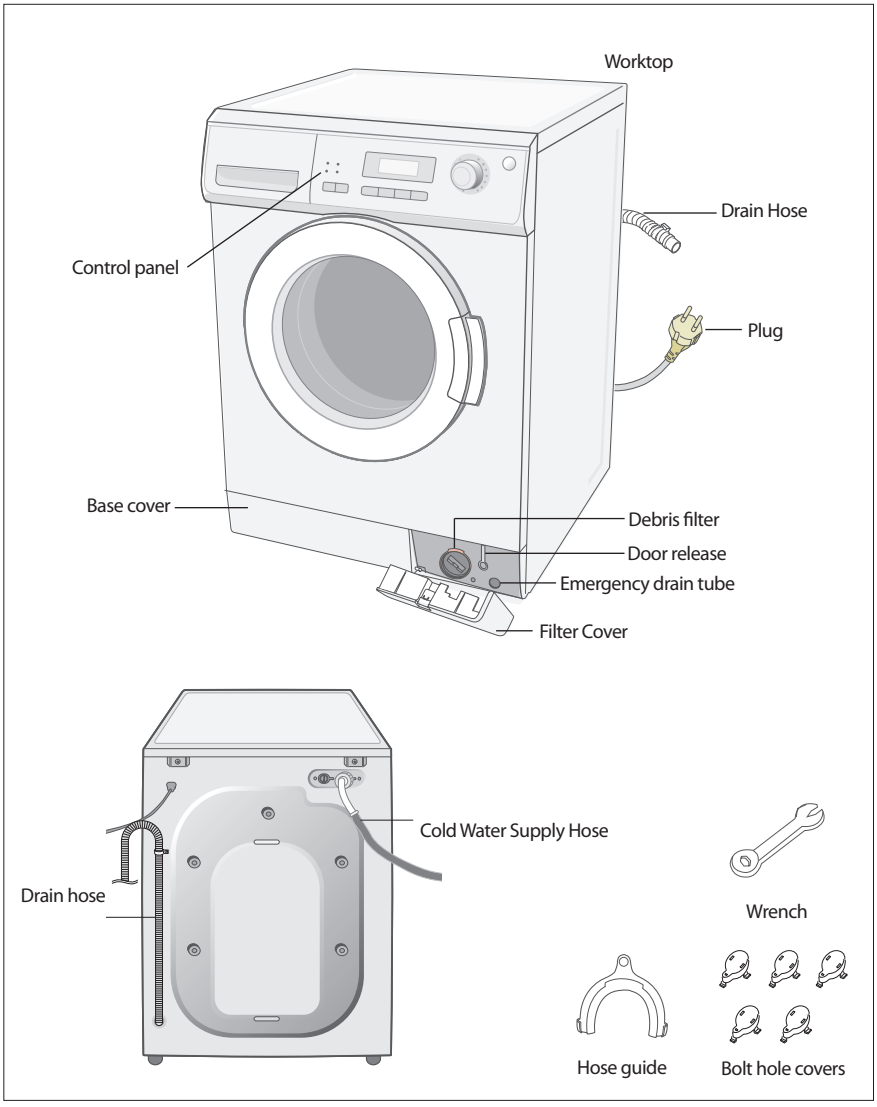




WD8602R8-02410Z_EN.indd 1 2009-01-09 ¿ÀÈÄ 6:20:29

# Installing the Washing Machine

## Selecting a location

Before you install the washing machine, select a location with the following characteristics:

- A hard, level surface (if the surface is uneven, see "Adjusting the leveling feet," below)
- Away from direct sunlight.
- Adequate ventilation
- Room temperature that will not fall below 0 ˚C
- Away from sources of heat such as coal or gas

Make sure that the washing machine does not stand on its power cord.
Ventilation openings must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.

## Adjusting the leveling feet

If the floor is uneven, adjust the feet (do not insert pieces of wood or any other objects under the feet):

1. Loosen the leg bolt by turning it with your hand until it is at the desired height.
2. Tighten the locking nut by turning it with the supplied wrench.

If the washer is placed on an uneven or weak surface, noise or vibration occurs.
(Only l degree angle is allowed.)

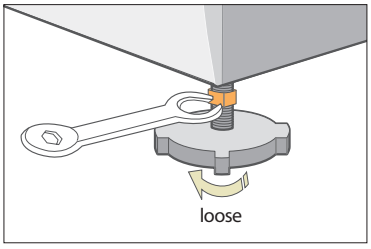


## Removing the shipping bolts

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.
2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.
3. Fill the holes with the supplied plastic covers.

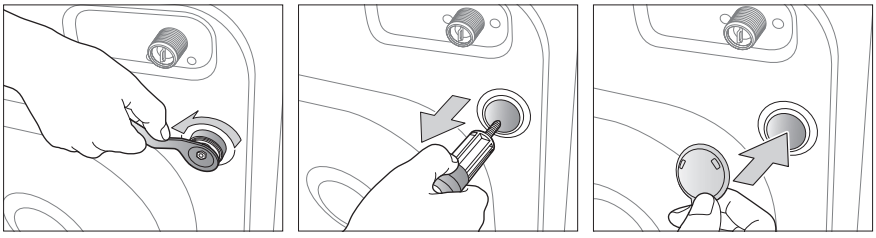

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

**NOTICE** Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.



WD8602R8-02410Z_EN.indd 2 2009-01-09 ¿ÀÈÄ 6:20:30

## Connecting the water supply hose

The water supply hose must be connected to the washing machine at one end and to the water faucet at the other. Do not stretch the water supply hose. If the hose is too short replace the hose with a longer, high pressure hose.

***To connect the water supply hose:***

1. Take the L-shaped arm fitting for the cold water supply hose and connect to the cold water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the cold water supply hose to your sink's cold water faucet and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting,rotating the hose, and retightening the fitting.

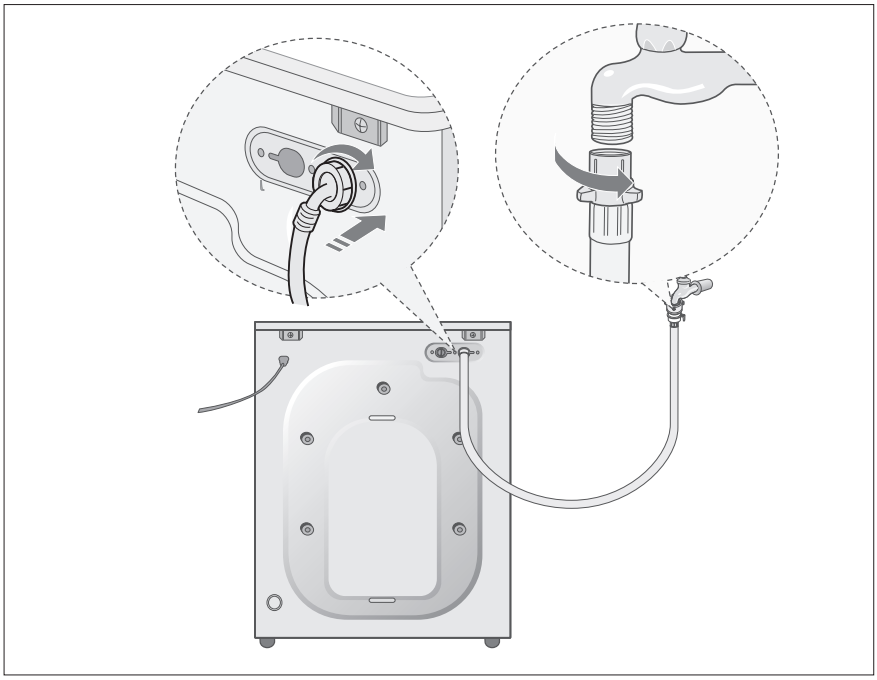

**Option:**

1. Take the red L-shaped arm fitting for the hot water supply hose and connect to the red hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water faucet and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.



WD8602R8-02410Z_EN.indd 3 2009-01-09 ¿ÀÈÄ 6:20:31

## Connecting the water supply hose (Option)

**1.** Remove the adaptor from the water supply hose.

**2.** First, using a '+' type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow until there is a 5mm gap.

**3.** Connect adaptor to the water tap by tightening the screws firmly. Then, turn part (b) following the arrow and put(a) and (b) together.



**4.** Connect the water supply hose to the adaptor. Pull down part (c) of the water supply hose.
When you release part (c) the hose automatically connects to the adaptor making a 'click' sound.



**5.** Connect the other end of the water supply hose to the inlet water valve at the rear of the washer. Screw the hose clockwise all the way in.

**NOTICE** After completing connection, if water leaks from the hose, then repeat the same steps. Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

## Positioning the drain hose

The end of the drain hose may be positioned in three ways:

### Over the edge of a wash basin.

The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the faucet with a piece of string to prevent the drain hose from moving.

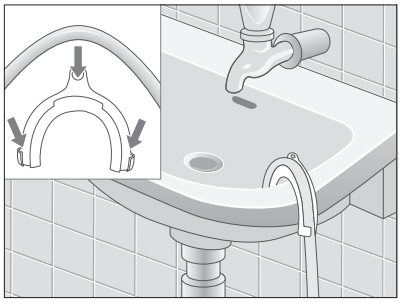

### In a sink drain pipe branch

The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

### In a drain pipe

Samsung recommends that you use a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.



WD8602R8-02410Z_EN.indd 4 2009-01-09 ¿ÀÈÄ 6:20:32

# Washing a Load of Laundry

## Overview of the control panel

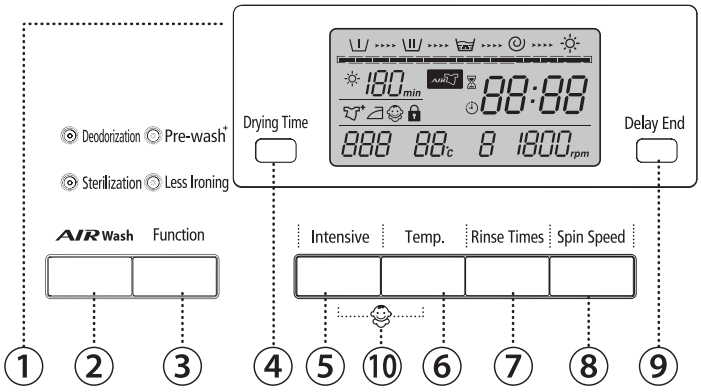


1. **Digital graphic display**
   Displays the remaining wash cycle time,all of washing information and error messages.
2. **Air Wash selection button**
   Press the button repeatedly to cycle through the Deodorization and Sterilization functions.
   When the Air Wash function is selected, other cycles can no longer be used.
   Deodorization : Removes bad smells from the laundry
   Sterilization : Eliminates bacteria and mites from the laundry
3. **Funtion selection button**
   Press the button repeatedly to cycle through the available partial wash options.
   Pre-wash+ : Pre-wash is available only with Cotton, Coloureds, Synthetics, Heavy Soil.
   Less Ironing : Less Ironing will reduce wrinkles and ironing time. (available course: Cotton, Coloureds, Synthetics, Jean, Quick, Heavy Soil, Mixed Load, Rinse + Spin, Spin)
4. **Drying Time selection button**
   Press the button repeatedly to cycle through the available dry selections.
   (130min. → 90min. → 60min. → 30min.)
5. **Intensive selection button**
   When selected, the washing power increases. This function can be selected for the Cotton, Coloreds, Synthetics, Jeans, Heavy Soil, Mixed Load, and Calm Wash courses. Pressing this button toggles between On and Off.
6. **Temperature selection button**
   Press the button repeatedly to cycle through the available water temperature options.
   (cold(0˚C), 30˚C, 40˚C, 60˚C and 95˚C)
   The default temperature varies depending on the cycle. You can also choose a particular laundry temperature from the preset temperature options.
7. **Rinse selection button**
   Press the rinse button to add rinse cycles. Maximum number of rinse cycles is five.
8. **Spin selection button**
   Press the button repeatedly to cycle through the available spin speed options.

| | |
|---|---|
| WD8602R8 | Rinse hold,No spin(0), 400, 800, 1000, 1200 rpm |

0 : no spin  Non display : Rinse hold



WD8602R8-02410Z_EN.indd 1 2009-01-09 ¿ÀÈÄ 6:20:33

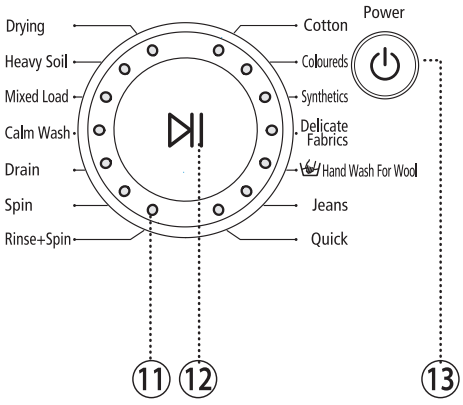


**9. Delay End selection button**

Press the button repeatedly to cycle through the available delayed start options (from 3 hour to 19 hours in one hour increments).
Displayed hours means the time of finished washing-cycle.

**10. Child Lock selection button**

This is a button for preventing children from manipulating the washing machine.
On/Off - To set the program on: Press the Start/Pause button to turn on the washing machine. Press and hold down the [Intensive] + [Temp] button for 2-3 seconds. It can only be activated when the machine is turned on. Once you set the Child Lock on while in washing, no button is activated until you set if off. Even the POWER button will not be activated. The Child Lock lamp lights on. To set the program off: Press and hold down the [Intensive] + [Temp] button again for 2-3 seconds, then the lamp lights off and is set off.

**NOTE :** Check out the Child Lock button first when no button is activated while the washing machine is working.

**11. Fuzzy Control dial**

Turn the dial to select one of the 14 available wash programs

| |
|---|
| Cotton, Coloureds, Synthetics, Delicate Fabrics, Hand Wash For Wool, Jeans, Quick, Drying, Heavy Soil, Mixed Load, Calm Wash, Drain, Spin, Rinse+Spin |

**12. Start/Pause selection button**

Press the Start/Pause button to pause or restart a cycle. If you want to change the washing cycle while a cycle is running, press this button to pause the currently running cycle, and press it again to restart the washing machine after choosing a different cycle.

**13. ⏻ (On/Off) selection button**

Press once to turn the washing machine on, press again to turn the washing machine off. If the washing machine power is left on for longer than 10 minutes without any buttons being touched, the power automatically turns off.



WD8602R8-02410Z_EN.indd 2 2009-01-09 ¿ÀÈÄ 6:20:34

## Washing clothes using Fuzzy Logic

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Logic" automatic control system. When you select a wash programme, the machine will set the correct temperature, washing time, and washing speed.

***To wash clothes using the Fuzzy Logic programs:***

1. Turn on your sink's water faucet.
2. Press the ⏻ (On/Off) button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling.
5. Close the door.
6. Add the detergent, softener, and prewash detergent (if necessary) into the appropriate compartment.
7. Turn the Fuzzy Control dial to select the appropriate program for the type of clothes Cotton, Coloureds, Synthetics, Delicate Fabrics, Hand Wash For Wool, Jeans, Quick, Drying, Heavy Soil, Mixed Load, Calm Wash, Drain, Spin, Rinse+Spin.

   You will see the indicators light up on the control panel.

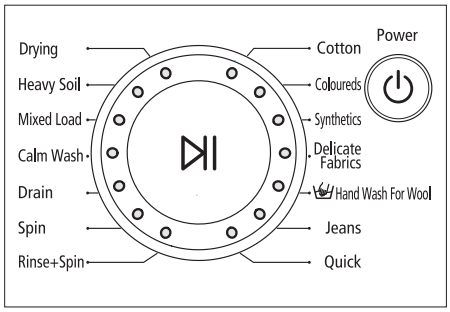


8. At this time, you can control the wash temperature, rinsing times, spin speed, delay time by pressing the appropriate option button.
9. Press the Start/Pause button on the Fuzzy Control dial and the wash cycle will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

***Pause Option (Stop & Adding laundry Function)***

Within 5 minutes from start, it is possible to put in the laundry or take out.
If push Start/Pause button, the door is unlocked immediately.
In case of too hot or too much water in washer, the door can not be opened.
After closed the door, one more push Start/Pause button to make washing process going on continuously.

***When the cycle is finished:***

After the total cycle has finished,the power will turn off automatically.

1. Open the door.
2. Remove laundry.



WD8602R8-02410Z_EN.indd 3 2009-01-09 ¿ÀÈÄ 6:20:35

## Washing clothes manually

You can wash clothes manually without using the Fuzzy Logic feature.

***To do so:***

1. Turn the water supply on.
2. Press the ⏻ (On/Off) button on the washing machine.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling.
5. Close the door.
6. Put the detergent and, if necessary, softener or prewash detergent, in the appropriate compartments.
7. Press the Temperature button to select the temperature. (cold(0˚C), 30˚C, 40˚C, 60˚C and 95˚C)
8. Press to rinse button to select the required number of rinse cycles. Maximum number of rinse cycles is five. The washing duration will be prolonged accordingly.
9. Press the Spin button to select the spin speed. [ 0, 400, 800, 1000, 1200 revolutions per minute(rpm)]
   **Notice:** The rinse hold program allows you to take clothes that are dripping wet out of the washing machine.
   0 : No spin , Non display : Rinse hold
10. Press the button repeatedly to cycle through the available delayed start options (from 3 hour to 19 hours in one hour increments). Displayed hours means the time of finished washing-cycle.
11. Press the Start/Pause button and the machine will begin the cycle.

## Using Delay End

You can set the washing machine to finish your wash automatically at a later time, choosing from 3 to 19 hour delay (in 1 hour increments). Displayed hours means the time of finished washing-cycle.

***To do this:***

1. Manually or automatically set your washing machine for the type of clothes you are washing.
2. Press the Delay End button repeatedly until the delay time is set.
3. Press the Start/Pause button. The Delay End indicator will light, and the clock will begin counting down until it reaches your finish time.
4. To cancel Delay End, press the ⏻ (On/Off) button, then turn the washing machine on again.



WD8602R8-02410Z_EN.indd 4 2009-01-09 ¿ÀÈÄ 6:20:36

## Washing for the first time

Before washing clothes for the first time, you must run a complete cycle without clothes.
To do this:

1. Press the ⏻ (On/Off) button.
2. Pour a little detergent into compartment (Ⅱ) in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the Temperature button repeatedly until 40 ˚C is displayed.
5. Press the Start/Pause button.

- This will remove any water from the manufacturer's test run remaining in the machine.

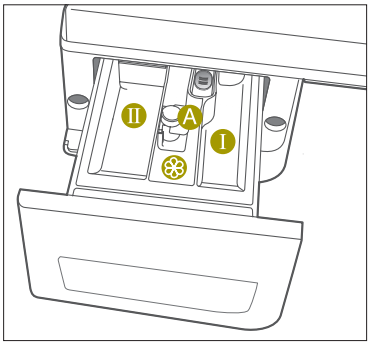


**Dispenser Ⅰ :** Detergent for prewash or starch.
**Dispenser Ⅱ :** Detergent for main wash, water softener,pre-soaking agent, bleach and stain removal product.
**Dispenser ❀ :** Additives,e.g.fabric softener or former (fill no higher than lower edge of insert " A")

## Putting detergent in the washing machine

1. Pull out the detergent drawer.
2. Add laundry detergent into compartment (Ⅱ).
3. Add softener into compartment (❀) (if you desire).
4. Add prewash detergent into compartment (Ⅰ) (if you desire).

**Caution :**
Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.

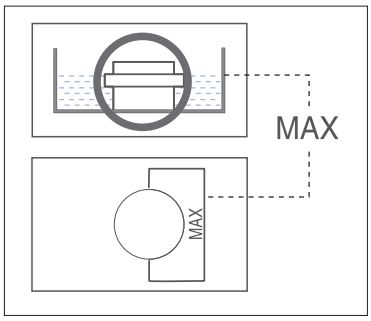




WD8602R8-02410Z_EN.indd 5 2009-01-09 ¿ÀÈÄ 6:20:37

## Washing tips and hints

**Sorting your laundry:** Sort your laundry according to the following characteristics:

- **Type of fabric care label symbol:** Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayon.
- **Colour:** Divide whites and colours. Wash new, coloured items separately.
- **Size:** Placing items of different sizes in the same load will improve the washing action.
- **Sensitivity:** Wash delicate items separately, using the Delicate wash programme for pure new wool, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

**Emptying pockets:** Coins, safety pins and similar items can damage linen, the washing machine drum, and the water tank.

**Securing fasteners:** Close zippers and fasten buttons or hooks; loose belts or ribbons should be tied together.

**Prewashing cotton:** Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, use a prewash with a protein-based detergent.

**Determining load capacity:** Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

| Fabric Type | Load Capacity |
|---|---|
| **Cotton/Coloureds** | 6.5 kg |
| **Synthetics** | 3.0 kg |
| **Delicates** | 2.5 kg |
| **Hand Wash For Wool** | 2.0 kg |

**Detergent tips:** The type of detergent you should use is based on the type of fabric (cotton, synthetics, delicates items, Hand Wash For Wool), colour, wash temperature, degree and type of soiling.
Always use "low suds" laundry soap, which is designed for automatic washing machines.
Follow the detergent manufacturer's recommendations based upon the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, ask your water authority.

**Notice :** Keep detergents and additives in a safe, dry place out of the reach of children.



WD8602R8-02410Z_EN.indd 6 2009-01-09 ¿ÀÈÄ 6:20:37

## Draining the washing machine in an emergency

1. Unplug the washing machine from the power supply.
2. Open the filter-cover by using a coin or a key.

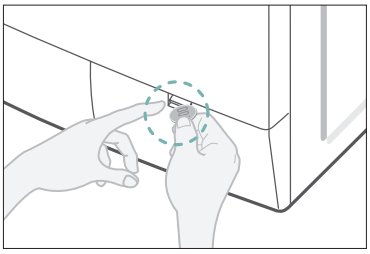

3. Unscrew the emergency drain cap by turning left. Grip the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.

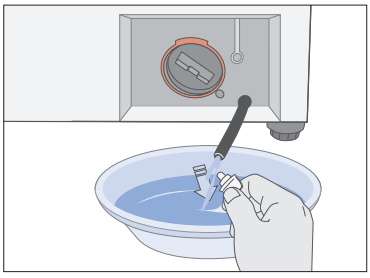

4. Allow all the water to flow into a bowl.
5. Reinsert the drain tube and screw the cap back on.
6. Replace the filter-cover.

## Repairing a frozen washing machine

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water on the source faucet to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water faucet and check if the water supply and drain operations are normal.

## Cleaning the exterior

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth and non-abrasive household detergents.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water on the washing machine.



WD8602R8-02410Z_EN.indd 1 2009-01-09 ¿ÀÈÄ 6:20:38

## Cleaning the detergent drawer and recess

1. Press the release lever on the inside of the detergent drawer and pull it out.
2. Remove the cap from compartment ( ).
3. Wash all of the parts under running water.
4. Clean the drawer recess with an old toothbrush.
5. Reinsert the cap (Pushing it firmly into place) and replace the liquid detergent divider into the drawer.
6. Push the drawer back into place.
7. Run a rinse programme without any laundry in the drum.

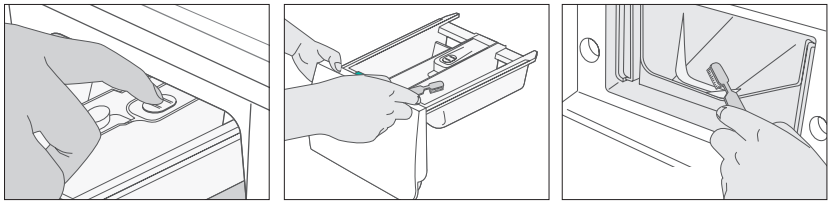

## Cleaning the debris filter

Clean the debris filter 5 or 6 times a year, or when you see the following error message on the display:

1. Open the filter-cover, See "Draining the washing machine in an emergency" on page C-1.
2. Unscrew emergency drain cap by turning left and drain off all the water.
   See "Draining the washing machine in an emergency" on page C-1.
3. Unscrew the filter cap and take it out.
4. Wash any dirt or other material from the filter. Make sure the drain pump propeller behind the filter

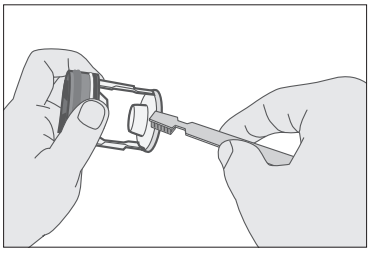

is not blocked. Replace the filter cap.

5. Replace the filter-cover.



WD8602R8-02410Z_EN.indd 2 2009-01-09 ¿ÀÈÄ 6:20:39

## Cleaning the water hose mesh filter

You should clean the water hose mesh filter at least one time per year, or when you see the following error message on the display:

***To do this:***

1. Turn off the water source to the washing machine.
2. Unscrew the hose from the back of the washing machine.
3. With a pair of pliers, gently pull out the mesh filter from the end of the hose and rinse it under water until clean. Also clean the inside and outside of the threaded connector.

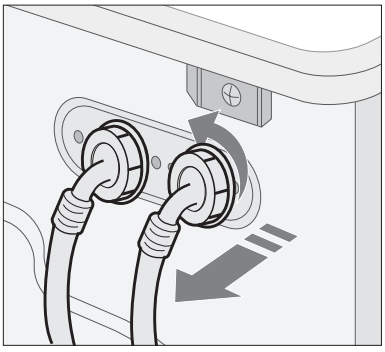

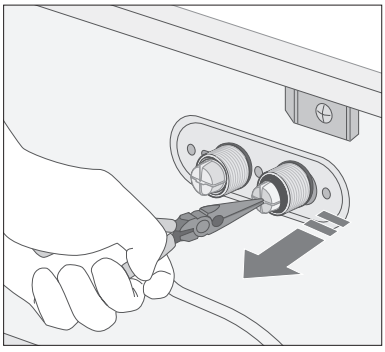

4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Turn on the faucet and make sure the connections are watertight.



WD8602R8-02410Z_EN.indd 3 2009-01-09 ¿ÀÈÄ 6:20:39

## Problems and solutions

### The washing machine will not start

- Make sure the door is firmly closed.
- Make sure the washing machine is plugged in.
- Make sure the water source faucet is turned on.
- Make sure to press the Start/Pause button.

### No water or insufficient water supply

- Make sure the water source faucet is turned on.
- Make sure the water source hose is not frozen.
- Make sure the water intake hose is not bent.
- Make sure the filter on the water intake hose is not clogged.

### Detergent remains in the detergent drawer after the wash programme is complete

- Make sure the washing machine is running with sufficient water pressure.
- Put the detergents in the inner parts of the detergent drawer(away from the outside edges).

### Washing machine vibrates or is too noisy

- Make sure the washing machine is set on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance.
- Make sure that the shipping bolts are removed.
- Make sure the washing machine is not touching any other object.
- Make sure the laundry load is balanced.

### The washing machine does not drain and/or spin

- Make sure the drain hose is not squashed or bent.
- Make sure the water hose mesh filter is not clogged.

### The Door does not open

1. Disconnect the power plug from the power supply.
2. Remove the water from the washing machine.
3. Open the filter cover using a coin.
4. Locate the orange plastic tab and pull forward to open the door.

## Understanding error messages

| Error displayed | Solution |
|---|---|
| dE2 | • Close the door. |
| 4E | • Make sure the source water faucet is turned on.<br>• Check the water pressure. |
| 5E | • Clean the debris filter.<br>• Make sure the drainage hose is installed correctly. |
| UE | • Laundry load is unbalanced; loosen any tangled laundry.<br>If only one item of clothing needs washing, such as a bathrobe or jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window. |
| cE / 3E | • Call after-sales service. |
| HOT | • Displayed when the door does not open for high temperature. |

***Before contacting After-Sales service:***

1. Try to remedy the problem (See "Troubleshooting" on this page).
2. Restart the programme to see if the fault is repeated.
3. If the malfunction persists, call after-sales service and describe the problem.



WD8602R8-02410Z_EN.indd 1 2009-01-09 ¿ÀÈÄ 6:20:40

# Programme Chart

(∗ user option)

| Programme | Max Load (kg) | Detergent and Additives | | | Temp. (˚C) | Spin Speed (Max) rpm | Delay End | Cycle Time (min) |
|---|---|---|---|---|---|---|---|---|
| | | prewash | wash | softener | max | | | |
| Cotton | 6.5 | ∗ | yes | ∗ | 95 | 1200 | ∗ | 89 |
| Coloureds | 6.5 | ∗ | yes | ∗ | 60 | 1200 | ∗ | 97 |
| Synthetics | 3.0 | ∗ | yes | ∗ | 60 | 1000 | ∗ | 69 |
| Delicates Fabrics | 2.5 | - | yes | ∗ | 40 | 800 | ∗ | 52 |
| Handwash for Wool | 2.0 | - | yes | ∗ | 40 | 800 | ∗ | 39 |
| Jeans | 2.0 | - | yes | ∗ | 40 | 800 | ∗ | 59 |
| Quick | 3.0 | - | yes | ∗ | 60 | 1200 | ∗ | 27 |

| Programme | Type of WASH |
|---|---|
| Cotton | Averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts,etc. |
| Coloureds | Averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. |
| Synthetics | Averagely or lightly soiled blouses, shirts, etc. Made of polyester (Diolen, Trevira), polyamide (perlon, Nylon) or other similar blends. |
| Delicates Fabrics | Delicate curtains, dresses, skirts, shirts and blouses. |
| Handwash for Wool | Only machine washable woolens with pure new wool label. |
| Quick | Lightly soiled cottons or linen blouses, shirts, dark coloured terry cloth, coloured linen articles, jeans, etc. |

1. The programme duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
2. Consumption in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.



WD8602R8-02410Z_EN.indd 1 2009-01-09 ¿ÀÈÄ 6:20:40

# Programme Chart

(∗ user option)

| Programme | Max Load (kg) | Detergent and Additives | | | Temp. (˚C) | Spin Speed (Max) rpm | Delay End | Cycle Time (min) |
|---|---|---|---|---|---|---|---|---|
| | | prewash | wash | softener | max | | | |
| Drying | 3.0 | - | - | - | - | - | ∗ | 130 |
| Heavy Soil | 6.5 | ∗ | yes | ∗ | 60 | 1200 | ∗ | 108 |
| Mixed Load | 2.5 | - | yes | ∗ | 60 | 800 | ∗ | 75 |
| Calm Wash | 3.0 | - | yes | ∗ | 40 | - | ∗ | 95 |

| Programme | Type of WASH |
|---|---|
| Heavy Soil | Stained or heavily soiled cottons, bed linen, table linen, underwear, towels, shirts, jeans, etc. |
| Mixed Load | A mix of lightly soiled cottons and synthetic fabrics. |
| Calm Wash | Extremely low noise level during the entire cycle and finish rinse hold. Cottons, bed linen, table linen, underwear, towels, shirts. |



WD8602R8-02410Z_EN.indd 2 2009-01-09 ¿ÀÈÄ 6:20:40

# Appendix

## Fabric care chart

Resistant material

Delicate fabric

Item may be washed at 95 ˚C

Item may be washed at 60 ˚C

Item may be washed at 40 ˚C

Item may be washed at 30 ˚C

Item may be hand washed

Dry clean only

Can be bleached in cold water

Do not bleach

Can be ironed at 200 ˚C max

Can be ironed at 150 ˚C max

Can be ironed at 100 ˚C max

Do not iron

Can be dry cleaned using any solvent

Dry clean with perchloride, lighter fuel,pure alcohol or R113 only

Dry clean with aviation fuel, pure alcohol or R113 only

Do not dry clean

Dry flat

Can be hung to dry

Dry on clothes hanger

Tumble dry, normal heat

Tumble dry, reduced heat

Do not tumble dry

## Electrical warnings

To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind:

- Operate the appliance only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.
- Use only a grounded or polarized outlet. For your safety, this appliance is equipped with a polarized alternating current line plug having one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still doesn't fit, contact your electrician to replace your outlet.
- Protect the power cord. Power supply cords should be routed so that they are unlikely to be walked on or pinched by items placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.
- Do not overload the wall outlet or extension cords. Overloading can result in fire or electric shock.



WD8602R8-02410Z_EN.indd 1 2009-01-09 ¿ÀÈÄ 6:20:45

# Appendix

## Protecting the environment

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the programme used).

## Declaration of conformity

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

## Specification

| TYPE | | FRONT LOADING WASHER | |
|---|---|---|---|
| DIMENSION | | WD8602R8 | |
| | | W598mm X D584mm X H844mm | |
| WATER PRESSUERE | | 50 kPa ~ 800 kPa | |
| WATER VOLUME | | 78 ℓ | |
| NET WEIGHT | | WD8602R8 | |
| | | 78 kg | |
| WASH AND DRY CAPACITY | WASH | 6.5 kg (DRY LAUNDRY) | |
| | DRY | 3.0 kg(DRY LAUNDRY) | |
| POWER CONSUMPTION | MODEL | WD8602R8 | |
| | WASHING | 230 V | 150 W |
| | WASHING AND HEATING | 220 V | 2000 W |
| | | 240 V | 2400 W |
| | DRY | 220 V | 2000 W |
| | | 240 V | 2400 W |
| | PUMPING | 34 W | |
| SPIN REVOLUTION | MODEL | WD8602R8 | |
| PACKAGE Wt | PAPER | 2.5 kg | |
| | PLASTIC | 1.0 kg | |
| LOAD | MODEL | WD8602R8 | |
| | rpm | 1200 | |



WD8602R8-02410Z_EN.indd 2 2009-01-09 ¿ÀÈÄ 6:20:45

## QUESTIONS OR COMMENTS?

| Country | CALL | OR VISIT US ONLINE AT |
|---|---|---|
| U.A.E | 800-SAMSUNG (726-7864)<br>8000-4726 | www.samsung.com/ae |

SAMSUNG

# إرشادات لمالك الغسالة

## WD8602R8(W/V/C/S/R)

قم بتسجيل المنتج الخاص بك على موقع
www.samsung.com/global/register

رقم الكود: DC68-02410Z__AR

WD8602R8-02410Z_AR.indd 1 1/12/2009 11:07:16 AM

WD8602R8-02410Z_AR.indd 2 1/12/2009 11:07:16 AM

# الميزات

### ١. Child Lock (التأمين ضد عبث الأطفال)

تمكنك وظيفة Child Lock (التأمين ضد عبث الأطفال) من إبقاء الأطفال بعيدًا عن الغسالة. حيث تضمن لك هذه الوظيفة عدم عبث الأطفال بأزرار تشغيل الغسالة. كما تنبهك عند تشغيلها.

### ٢. Delay End (تأجيل التوقف)

تمكنك هذه الوظيفة من تأجيل وقت بدء الغسيل لفترة تصل إلى ٢٤ ساعة.

### ٣. Calm Wash (غسيل هادىء)

تمنحك الغسالة دورة غسيل هادئة جدًا بحيث يمكنك القيام بالغسيل أثناء نومك. وتتميز دورة (تنشيف) بأنها هادئة جدًا عندما تصرف الماء خارج الغسالة.

### ٤. Less Ironing (كي أقل)

سوف تتضاءل الحاجة إلى الكي نظراً لقيام برنامج "Samsung's Carefreewash" بتنظيف الملابس الناعمة والرقيقة والتعامل مع الألياف برقة. بفضل تقنية المعالجة الرقمية المعروفة عالميًا والمطورة بواسطة Samsung. تعد وظيفة Less Iron (كي أقل) مخصصة للغسيل للمساعدة على تقليل التجاعيد في الملابس الرقيقة بما يوفر الوقت الذي تستغرقه في الكي.

### ٥. دورة Delicates &Wool (الملابس الرقيقة والصوف)

يمكنك العناية بمثل هذه الأنواع من الملابس بشكل خاص وذلك عن طريق تحديد درجة الحرارة الملائمة ودورة الغسيل الرقيق وكمية الماء المناسبة.

### ٦. Air Wash (الغسيل بالهواء)

يقوم نظام Air Wash (الغسيل بالهواء) بإزالة الروائح الكريهة والتخلص من البكتيريا والحشرات التي يصعب التخلص منها مع نظام الغسيل التقليدي. وهذه إحدى فوائد تقنية التنظيف بالهواء الفريدة.

- الملابس التي يمكن تنظيفها بالهواء: المعاطف الصوفية والسترات القطنية/الدخلية والسترات الثقيلة والبدل والمساند والوسائد وملابس التطريز
- الملابس التي لا يمكن تنظيفها بالهواء: الملابس الجلدية والحريرية والناعمة والبطاطين التي تحتوي على كهربائية والملابس الأخرى المتسخة



WD8602R8-02410Z_AR.indd 3 1/12/2009 11:07:16 AM

# احتياطات من أجل السلامة

تهانينا لشرائك غسالة Samsung. تحتوي تعليمات المالك هذه على معلومات مفيدة تتعلق بتركيب الجهاز وتشغيله والعناية به. الرجاء قراءة هذه الإرشادات بعناية لتتمكن من تحقيق أقصى استفادة من مزايا الغسالة والاستمتاع باستخدامها لسنوات عديدة.

## قبل استخدام الجهاز

- قد تشكل مواد التعبئة خطورة على الأطفال؛ احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين...الخ) بعيداً عن متناول الأطفال.
- تم تصميم الجهاز للاستخدام المنزلي فقط.
- تأكد من قيام فنيين مؤهلين بتوصيل توصيلات الماء والكهرباء، مع مراعاة تعليمات الشركة المصنعة (راجع "تركيب الغسالة") وقواعد السلامة المحلية.
- يجب إزالة جميع مسامير التعبئة والشحن قبل تشغيل الجهاز حيث قد تحدث أضرارًا خطيرة في حالة عدم إزالتها. راجع الجزء "إزالة مسامير الشحن".
- قبل غسيل الملابس للمرة الأولى، يجب تشغيل الغسالة دورة كاملة دون ملابس. راجع "الغسيل للمرة الأولى".

## إرشادات من أجل السلامة

- قبل تنظيف الجهاز أو نقله للصيانة، افصل قابس الجهاز من منفذ التيار الكهربي أو اضبط زر ⏻ On/Off (التشغيل/الإيقاف) على وضع الإيقاف.
- تأكد من تفريغ جيوب الملابس التي سيتم غسلها. يمكن أن تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو البراغي أو الأحجار في إحداث أضرار بالغة بالجهاز.
- افصل قابس الجهاز من منفذ التيار الكهربي وأغلق صنبور الماء بعد الاستخدام دائمًا.
- قبل فتح باب الجهاز، تأكد من جفاف الماء على الجهاز. لا تفتح الباب في حالة وجود الماء داخل الغسالة.
- قد يتسلق الحيوانات الأليفة والأطفال إلى داخل الجهاز. افحص الجهاز كل مرة قبل التشغيل.
- يكون الباب الزجاجي ساخنًا جدًا أثناء دورة الغسل. تأكد من إبعاد الأطفال عن الجهاز أثناء تشغيله.
- لا تحاول إصلاح الجهاز بنفسك. فقد تؤدي عمليات الإصلاح من قبل الأفراد غير الفنيين أو غير المؤهلين إلى حدوث إصابات و/أو إحداث المزيد من الخلل بالجهاز.
- في حالة تلف قابس الجهاز (سلك التيار الكهربائي)، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.
- يجب صيانة هذا الجهاز من قبل مركز الخدمات المعتمد، ويجب تبديل قطع الغيار بقطع غيار أصلية فقط.
- هذا الجهاز غير مخصص للاستخدام بواسطة الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة ما لم يخضعوا لإشراف شخص مسؤول للتأكد من إمكانية استخدامهم للجهاز بشكلٍ آمن.
  يجب أن يخضع الأطفال للإشراف لضمان عدم عبثهم بالجهاز.
- إذا تم توصيل هذا الجهاز بالتيار الكهربي من خلال كبل إضافي أو جهاز توليد للتيار الكهربي محمول، يجب وضع الكبل الإضافي أو جهاز توليد التيار الكهربي المحمول بشكلٍ لا يجعله عرضة للبلل أو الرطوبة. بالإضافة إلى أنه يجب أن يكون معدل مرور التيار في الكبل الإضافي أو في جهاز توليد التيار الكهربي المحمول مناسب للجهاز.
- يجب أن يتم توصيل هذا الجهاز من خلال مأخذ قوي الاحتمال لضمان الاستهلاك الصحيح للطاقة.
- يجب وضع الجهاز في مكان يتيح الوصول إلى مأخذ التوصيل بعد تركيبه.
- يُحظر استخدام الماء المعالجة والتي تحتوي على زيوت أو كريمات أو مستحضرات، والتي تكون في الغالب موجودة في المستحضرات الجلدية أو عيادات التدليك.
  - وإلا سيؤدي هذا إلى إتلاف التغليف وهو ما يؤدي بدوره إلى التعطل أو تسرب الماء.
- وبالنسبة لأنبوب الغسيل الداخلي فهو مصنوع بحيث يكون مضاداً للصدأ. ولكن في حالة ترسب بعض المعادن الصغيرة مثل دبابيس الشعر في ذلك الأنبوب لفترة زمنية طويلة، فقد يتعرض الأنبوب للصدأ نتيجة لذلك.
  - يُحظر أيضاً ترك الماء التي تحتوي على الكلور أو أي مواد كيميائية في الأنبوب لفترة زمنية طويلة.
  - يُحظر استخدام الماء التي تحتوي على المعادن بصورة منتظمة أو تركها في الأنبوب لفترة زمنية طويلة.

  وفي حالة ظهور الصدأ على سطح الأنبوب، يفضل تنظيف سطح الأنبوب باستخدام سائل تنظيف (محايد) واستخدام قطعة قماش ناعمة أو قطعة إسفنج في التنظيف.
  (يُحظر بأي حال من الأحوال استخدام فرشة معدنية في التنظيف)
- الغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.
- استخدم أطقم خراطيم جديدة، حيث لا يجب إعادة استخدام الخراطيم القديمة.



WD8602R8-02410Z_AR.indd 4 1/12/2009 11:07:16 AM

# جدول المحتويات


**احتياطات من أجل السلامة** . . . . . **الغلاف الداخلي**

**تركيب الغسالة** . . . . . **A-١**
إخراج الغسالة من صندوق التعبئة . . . . . A-١
نظرة عامة حول الغسالة . . . . . A-١
اختيار مكان الغسالة . . . . . A-٢
ضبط استواء أرجل الغسالة . . . . . A-٢
إزالة مسامير الشحن . . . . . A-٢
توصيل خرطوم تزويد الماء . . . . . A-٣
وضع خرطوم تصريف الماء . . . . . A-٤

**غسيل الملابس** . . . . . **B-١**
نظرة عامة حول لوحة التحكم . . . . . B-١
غسيل الملابس باستخدام التحكم الرقمي . . . . . B-٣
غسل الملابس يدوياً . . . . . B-٤
استخدام تأجيل التوقف . . . . . B-٤
الغسل للمرة الأولى . . . . . B-٥
وضع مسحوق الغسيل في الغسالة . . . . . B-٥
تلميحات وأفكار مفيدة للغسيل . . . . . B-٦

**صيانة الغسالة** . . . . . **C-١**
تصريف الماء من الغسالة عند الطوارئ . . . . . C-١
إصلاح جهاز غسالة متجمد . . . . . C-١
تنظيف الأسطح الخارجية . . . . . C-١
تنظيف درج مسحوق الغسيل والموضع الداخلي . . . . . C-٢
تنظيف مصفاة المخلفات . . . . . C-٢
تنظيف المصفاة الشبكية المتصلة بخرطوم الماء . . . . . C-٣

**استكشاف المشاكل وحلها** . . . . . **D-١**
المشاكل والحلول . . . . . D-١
فهم رسائل الخطأ . . . . . D-١

**جدول الدورات** . . . . . **E-١**

**الملحق** . . . . . **F-١**
جدول العناية بالأقمشة . . . . . F-١
التنبيهات الكهربية . . . . . F-١
حماية البيئة . . . . . F-٢
إعلان التوافق . . . . . F-٢
المواصفات . . . . . F-٢




WD8602R8-02410Z_AR.indd 5 1/12/2009 11:07:16 AM

## إخراج الغسالة من صندوق التعبئة

أخرج الغسالة من الصندوق وافحصها للتأكد من عدم تعرضها لأي تلف أثناء الشحن. تأكد أيضاً من وجود جميع القطع المبينة أدناه. في حالة تعرض الغسالة لأي تلف أثناء الشحن أو عدم وجود جميع القطع المبينة أدناه، اتصل بموزع Samsung فوراً.

## نظرة عامة حول الغسالة

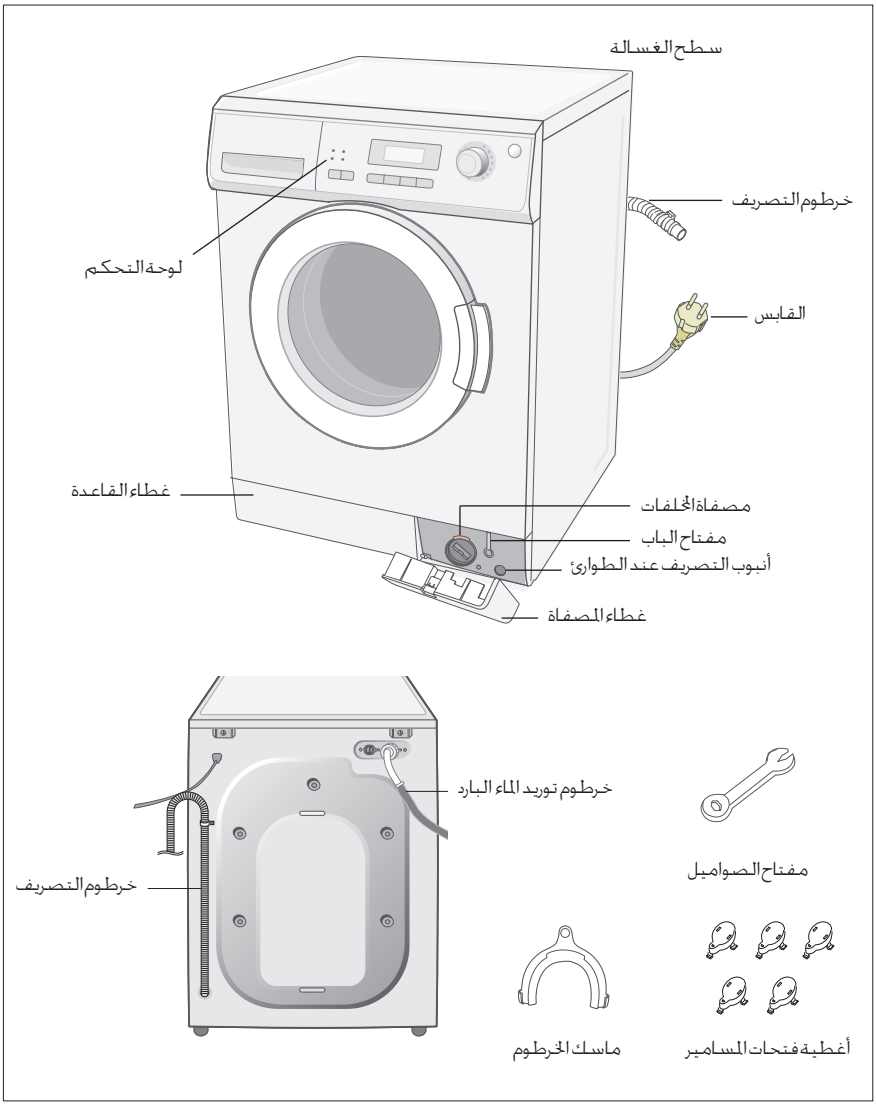




WD8602R8-02410Z_AR.indd 1 1/12/2009 11:07:18 AM

## اختيار مكان الغسالة

قبل تركيب الغسالة، اختر مكاناً تتوفر به الخصائص التالية:

- أرض ثابتة ومستوية (إذا كانت الأرض غير مستوية، راجع "ضبط استواء أرجل الغسالة" المبين أدناه).
- مكان بعيد عن أشعة الشمس المباشرة.
- تهوية مناسبة
- لا تقل درجة حرارة الغرفة عن درجة صفر مئوية.
- بعيد عن مصادر الحرارة مثل الفحم أو الغاز

تأكد من عدم وضع الغسالة فوق سلك الطاقة.

يجب تجنب سد فتحات التهوية بواسطة السجاد عند تركيب الغسالة على أرض مغطاة بالسجاد.

## ضبط استواء أرجل الغسالة

إذا كانت الأرض غير مستوية، اضبط الأرجل (لا تضع قطع من الخشب أو أي أشياء أخرى تحت أرجل الغسالة):

١. أرخ برغي الرجل بتدويره باليد حتى يصل إلى الارتفاع المطلوب.
٢. اربط صمولة التأمين بلفها باستخدام مفتاح الصواميل المزود مع الجهاز.

إذا تم تثبيت الغسالة على سطح غير مستو أو ضعيف إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل.

(مسموح فقط بزاوية ١ درجة).

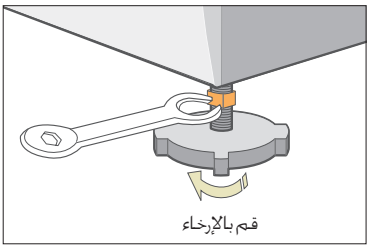
قم بالإرخاء

## إزالة مسامير الشحن

قبل تركيب جهاز الغسالة، يجب إزالة مسامير الشحن الخمسة من اللوحة الخلفية للجهاز.

١. قم بخلخلة جميع المسامير بواسطة مفتاح الربط المرفق مع الجهاز.
٢. امسك الصواميل بواسطة مفتاح الربط واسحبها من خلال الجزء العريض للفتحة. كرر ذلك لإزالة كل مسمار.
٣. قم بتغطية جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

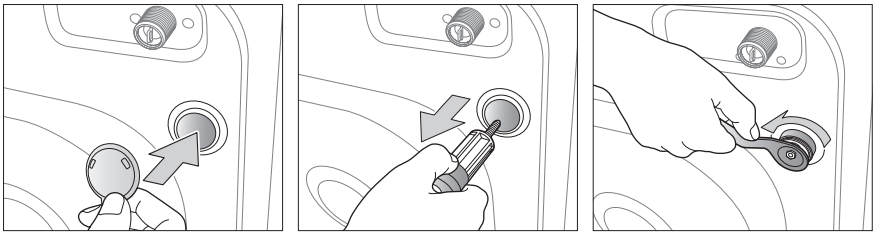

٤. قم بحفظ صواميل الشحن في مكان بعيد آمن حيث قد تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

**ملاحظة** قد تشكل مواد التعبئة خطورة على الأطفال؛ احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين، الخ.) بعيداً عن متناول الأطفال.



WD8602R8-02410Z_AR.indd 2 1/12/2009 11:07:18 AM

## توصيل خرطوم تزويد الماء

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة وتوصيل الطرف الآخر للخرطوم بصنبور الماء. لا تجذب خرطوم توريد الماء إذا كان الخرطوم قصيراً للغاية، بدّله بخرطوم أطول عالي الضغط.

**لتوصيل خرطوم توريد الماء:**

١. خذ مثبت الذراع الذي على شكل حرف L الذي يلائم خرطوم توريد الماء البارد ووصله إلى مدخل توريد الماء البارد الموجود في اللوحة الخلفية للغسالة، وأحكم ربطه يدويًا.
٢. صل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء الساخن وأحكم توصيله باليد. يمكنك، عند الحاجة، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولف الخرطوم وإعادة تشديد المثبّت.

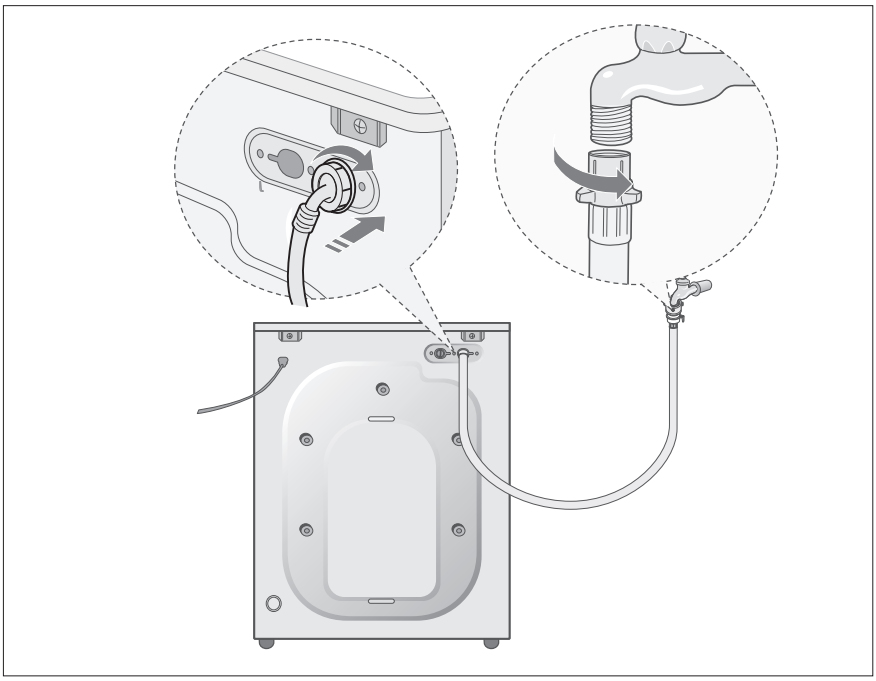

**اختياري:**

١. خذ مثبت الذراع الذي على شكل L الأحمر لخرطوم توريد الماء الساخن ووصله إلى مدخل توريد الماء الساخن الأحمر الموجود على اللوحة الخلفية للغسالة، وأحكم ربطه يدويًا.
٢. صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم توصيله باليد.
٣. استخدم قطعة على شكل Y إذا أردت استخدام الماء البارد فقط.



WD8602R8-02410Z_AR.indd 3 1/12/2009 11:07:19 AM

## توصيل خرطوم توريد الماء (اختياري)

١. أزل المحول من خرطوم تزويد الماء.



٢. أولاً، باستخدام مفك برغي من نوع "+" أرخ البراغي الأربعة الموجودة بالمحول، ثم أخرج المحول ودور الجزء (ب) باتجاه السهم حتى توجد مسافة مقدارها ٥ مم بينهما



٣. صل المحوّل إلى صنبور الماء بتشديد البراغي بإحكام. ثم لف الجزء (ب) باتجاه السهم وضع الجزأين (أ) و (ب) معاً.



٤. صل خرطوم تزويد الماء بالمحول. اجذب الجزء (ج) من خرطوم توريد الماء.
عند ترك الجزء (ج)، يتصل الخرطوم تلقائياً بالمحول محدثاً صوت "إغلاق".



٥. صل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود خلف الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.



**ملاحظة** بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات. استخدم صنبور من النوع العادي للتزويد بالماء. إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنبور إلى المحوّل.

## وضع خرطوم تصريف الماء

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

### فوق حافة حوض الغسيل.

يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم. للاحتفاظ بثني خرطوم التصريف، استخدم دليل الخرطوم البلاستيكي المزود مع الجهاز. ثبت الدليل على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

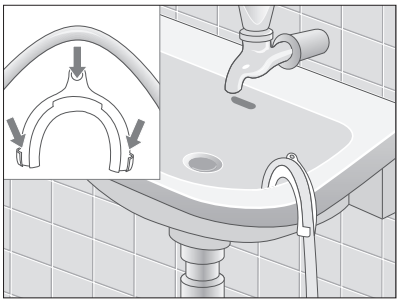

### في فرع أنبوب تصريف الحوض

يجب أن يكون فرع أنبوب التصريف فوق سيفون الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

### في أنبوب تصريف الماء

توصي Samsung باستخدام أنبوب عمودي على ارتفاع ٦٥ سم؛ يجب ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.



WD8602R8-02410Z_AR.indd 4 1/12/2009 11:07:20 AM

## نظرة عامة حول لوحة التحكم

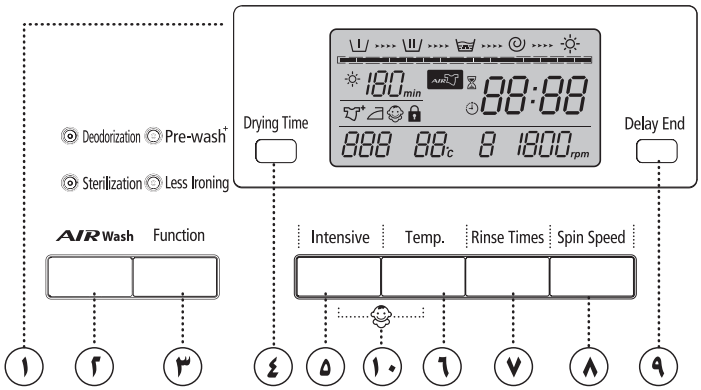


### ١. لوحة العرض الرسومية الرقمية
تعرض الوقت المتبقي لدورة الغسيل وكافة المعلومات الخاصة بالغسيل ورسائل الخطأ.

### ٢. الزر Air Wash (غسيل بالهواء)
اضغط على الزر بشكل متكرر لتشغيل دورة إزالة الروائح الكريهة من الملابس وتعقيمها.
لا يمكن تشغيل أي دورة تنظيف أخرى أثناء تشغيل وظيفة الغسيل بالهواء.
Deodorization (إزالة الروائح الكريهة): إزالة الروائح الكريهة من الملابس
Sterilization (التعقيم): إزالة البكتيريا والحشرات من الملابس

### ٣. زر تحديد Funtion (الوظيفة)
اضغط الزر بشكل متكرر للاختيار من بين خيارات الغسيل الجزئي المتوفرة.
Pre-wash+ (+غسل أولي): تتاح خاصية الغسيل الأولي فقط مع Cotton (قطن) و Coloureds (ملابس ملونة) و Synthetics (اصطناعي) و Heavy Soil (أوساخ كثيرة).
Less Ironing (كي أقل) : يؤدي تحديد Less Ironing (كي أقل) إلى تقليل الثنيات وتوفير وقت الكي.
(الدورات المتاحة: Cotton (قطن)، Coloureds (ملابس ملونة)، Synthetics (اصطناعي)، Jean (جينز)، Quick (سريع)، Heavy Soil (أوساخ كثيرة)، Mixed Load (حمولة متنوعة)،
Rinse + Spin (شطف + تنشيف)، Spin (تنشيف))

### ٤. اختيار زر Drying Time (مدة التجفيف)
اضغط على الزر بشكل متكرر للاختيار من بين خيارات تحديد التنشيف المتوفرة.
(١٣٠ دقيقة ← ٩٠ دقيقة ← ٦٠ دقيقة ← ٣٠ دقيقة)

### ٥. زر تحديد Intensive (مكثف)
تزيد طاقة الغسيل عند تحديد هذا الزر. يمكن تحديد هذه الوظيفة للدورات Cotton (قطن) و Coloreds (ملابس ملونة) و Synthetics (اصطناعي) و Jeans (جينز) و Heavy Soil (أوساخ كثيرة) و Mixed Load (حمولة متنوعة) و Calm Wash (غسيل هادئ). يؤدي الضغط على هذا الزر إلى التبديل بين On (تشغيل) و Off (إيقاف تشغيل).

### ٦. زر تحديد .Temp (درجة الحرارة)
اضغط على الزر بشكل متكرر للتنقل بين خيارات درجات حرارة المياه المتوفرة
(بارد (٠ درجة م) و ٣٠ درجة و ٤٠ درجة و ٦٠ درجة و ٩٥ درجة)
تختلف درجة الحرارة الافتراضية باختلاف دورة الغسيل. يمكنك أيضاً اختيار درجة حرارة معينة للغسيل من خيارات درجات الحرارة التي تم ضبطها مسبقاً.

### ٧. زر تحديد Rinse (شطف)
اضغط زر الشطف لإضافة دورات الشطف. الحد الأقصى لعدد دورات الشطف هو ٥.



WD8602R8-02410Z_AR.indd 1 1/12/2009 11:07:21 AM

# غسيل الملابس

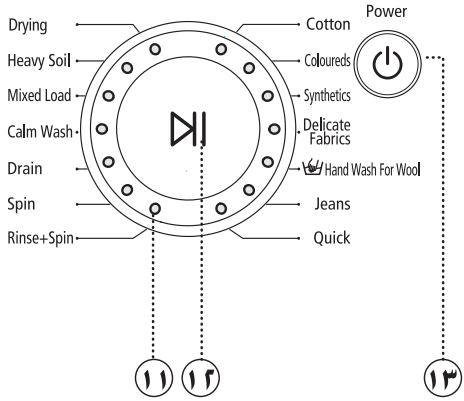


### ٨. زر تحديد Spin (تنشيف)

اضغط على الزر بشكل متكرر للاختيار من بين سرعات التنشيف المتوفرة.

| | |
|---|---|
| WD8602R8 | انتظار الشطف، عدم التنشيف (٠)، ٤٠٠، ٨٠٠، ١٠٠٠، ١٢٠٠ دورة في الدقيقة |

٠ : بدون تنشيف  بدون عرض : انتظار الشطف

### ٩. زر تحديد Delay End (تأجيل التوقف)

اضغط الزر بشكل متكرر للاختيار من بين خيارات تأجيل التشغيل المتوفرة (من ساعة واحدة إلى ١٩ ساعة بواقع ساعة واحدة).

تشير الساعات المعروضة إلى وقت دورة الغسيل المنتهية.

### ١٠. زر تحديد Child Lock (التأمين ضد عبث الأطفال)

يمنع هذا الزر الأطفال من العبث بالغسالة.

الزر On/Off (تشغيل/إيقاف التشغيل) – لضبط البرنامج على: اضغط على الزر Start/Pause (تشغيل/توقف) لتشغيل الغسالة. اضغط واستمر في الضغط على الزر [Intensive] (مكثف) + [Temp.] (درجة الحرارة) لمدة تتراوح بين ٢ إلى ٣ ثانية. يمكن تشغيل هذا البرنامج فقط عند تشغيل الغسالة. بمجرد تشغيل دورة "التأمين ضد عبث الأطفال" أثناء الغسيل، لا يتم تنشيط أي زر حتى يتم إيقاف تشغيل البرنامج. ولن يتم حتى تنشيط الزر POWER (الطاقة). يضيء مصباح "التأمين ضد عبث الأطفال". لإيقاف تشغيل الدورة: اضغط مع الاستمرار في الضغط على الزر [Intensive] (مكثف) + [Temp.] (درجة الحرارة) مرة أخرى من ثانيتين إلى ثلاث ثواني. ومن ثم ينطفئ مصباح الدورة ويتم إيقاف تشغيله.

**ملاحظة:** تحقق من الزر Child Lock (التأمين ضد عبث الأطفال) أولاً في حالة عدم تشغيل أي زر في أثناء عمل الغسالة.

### ١١. قرص التحكم الرقمي

قم بإدارة القرص لاختيار دورة من بين دورات الغسيل الأربعة عشر المتاحة

Cotton (قطن) أو Coloureds (ملابس ملونة) أو Synthetics (اصطناعي) أو
Delicate Fabrics (ملابس رقيقة)، Hand Wash For Wool (الغسيل اليدوي للصوف)، Jeans (جينز)،
Quick (سريع)، Drying (تجفيف)، Heavy Soil (أوساخ كثيرة)، Mixed Load (حمولة متنوعة)،
Calm Wash (غسيل هادئ)، Drain (تصريف)، Spin (تنشيف)، Rinse+Spin (شطف+تنشيف)

### ١٢. زر تحديد Start/Pause (تشغيل/توقف)

اضغط على الزر Start/Pause (تشغيل/توقف) لإيقاف أحد دورات الغسيل أو إعادة تشغيله. إذا كنت تريد تغيير تغيير دورة الغسيل أثناء تشغيل أحد الدورات، اضغط على هذا الزر لإيقاف الدورة التي تعمل حاليا ثم اضغط عليه مرة أخرى لإعادة تشغيل الغسالة بعد اختيار دورة غسيل مختلفة.

### ١٣. زر تحديد ⏻ On/Off (تشغيل/إيقاف التشغيل)

اضغط على الزر مرة لتشغيل الغسالة، واضغط عليه مرة أخرى لإيقاف الغسالة عن العمل. في حالة ضغط زر تشغيل الغسالة وتركها لمدة تزيد عن ١٠ دقائق دون ضغط أي زر، يتوقف الجهاز عن العمل بشكل تلقائي.



WD8602R8-02410Z_AR.indd 2 1/12/2009 11:07:22 AM

## غسيل الملابس باستخدام التحكم الرقمي

تسهل الغسالة الجديدة من عملية غسل الملابس، باستخدام نظام التحكم الرقمي الأوتوماتيكي من Samsung. عند اختيار دورة غسيل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسيل وسرعات الغسيل المناسبة.

**لغسيل الملابس باستخدام دورة التحكم الرقمي:**

١. افتح صنبور الماء.
٢. اضغط الزر On/Off (تشغيل/إيقاف التشغيل).
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعّم القماش ومسحوق الغسيل الأولي (عند الحاجة) في الحجيرة الخاصة به.
٧. قم بإدارة قرص التحكم الرقمي لتحديد البرنامج الملائم لنوع الملابس Cotton (قطن) أو Coloureds (ملابس ملونة) أو Synthetics (اصطناعي) أو Delicate Fabrics (ملابس رقيقة) أو Hand Wash For Wool (الغسيل اليدوي للصوف)، Jeans (جينز)، Quick (سريع)، Drying (تجفيف)، Heavy Soil (أوساخ كثيرة)، Mixed Load (حمولة متنوعة)، Calm Wash (غسيل هادىء)، Drain (تصريف)، Spin (تنشيف)، Rinse+Spin (شطف+تنشيف).

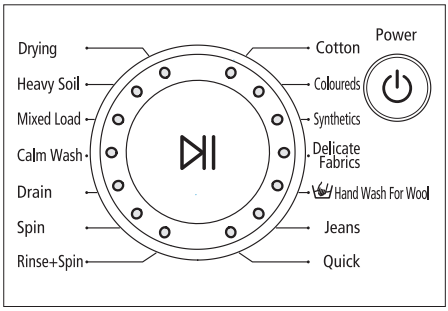


يمكنك مشاهدة المؤشرات المضاءة في لوحة التحكم.

٨. يمكنك في هذا الوقت، التحكم في حرارة الغسيل وأوقات الشطف وسرعة التنشيف وتأجيل التشغيل من خلال الضغط على زر الاختيار الملائم.
٩. اضغط زر Start/Pause (تشغيل/توقف) الموجود في قرص التحكم الرقمي وعندها تبدأ دورة الغسيل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

**خيارات التوقف (وظيفة الإيقاف وإضافة الغسيل)**

في غضون ٥ ثوان من بدء التشغيل، يمكنك إضافة غسيل أو إخراجه.
إذا قمت بالضغط على الزر Start/Pause (تشغيل/توقف)، يتم فتح الباب فوراً.
وفي حالة وجود كمية كبيرة من الماء في الغسالة أو كانت درجة حرارة الماء مرتفعة للغاية، لن يمكن فتح الباب.
بعد إغلاق الباب، اضغط مرة أخرى على الزر Start/Pause (تشغيل/توقف) لمتابعة عملية الغسيل.

**عند انتهاء الدورة:**

بعد انتهاء دورة الغسيل بالكامل، يتم فصل التيار بشكل تلقائي.
١. افتح الباب.
٢. أخرج الملابس.



WD8602R8-02410Z_AR.indd 3 1/12/2009 11:07:22 AM

## غسل الملابس يدوياً

يمكنك غسيل الملابس يدوياً دون استخدام ميزة التحكم الرقمي.

**للقيام بذلك:**

١. قم بتشغيل مصدر توريد الماء.
٢. اضغط الزر On/Off ⏻ (تشغيل/إيقاف التشغيل) الموجود في جهاز الغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. ضع مسحوق الغسيل. وعند الحاجة، ملّين القماش أو مسحوق الغسيل الأولي في الحجيرات المناسبة.
٧. اضغط الزر Temp (درجة الحرارة) لاختيار درجة حرارة الماء.
(ماء بارد، ٣٠°م، ٤٠°م، ٦٠°م، ٩٥°م).
٨. اضغط على زر الشطف لتحديد الرقم المطلوب لدورات الشطف.
الحد الأقصى لعدد دورات الشطف هو خمس.
ستستمر مدة الغسيل وفقًا لعدد الدورات.
٩. اضغط على الزر Spin (تنشيف) لتحديد سرعة الدوران. [ ٠، ٤٠٠، ٨٠٠، ١٠٠٠، ١٢٠٠ دورة في الدقيقة]
**ملاحظة:** يسمح لك برنامج انتظار الشطف بإخراج الملابس المبتلة من الغسالة.
٠ : بدون تنشيف  بدون عرض : انتظار الشطف
١٠. اضغط الزر بشكل متكرر للاختيار من بين خيارات تأجيل التشغيل المتوفرة (من ساعة واحدة إلى ١٩ ساعة بواقع ساعة واحدة). تشير الساعات المعروضة إلى وقت دورة الغسيل المنتهية.
١١. اضغط على الزر Start/Pause (تشغيل/توقف) وعندها يبدأ الجهاز بالدوران.

## استخدام تأجيل التوقف

يمكنك ضبط جهاز الغسالة لإنهاء عملية الغسيل تلقائياً بعد وقت معين، باختيار وقت من ٣ ساعات وحتى ١٩ ساعة للتأجيل (بواقع ساعة واحدة). تشير الساعات المعروضة إلى وقت دورة الغسيل المنتهية.

**للقيام بذلك:**

١. يمكنك ضبط الغسالة تلقائياً أو يدوياً حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر Delay End (تأجيل التوقف) بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على الزر Start/Pause (تشغيل/توقف). وعندئذٍ سيومض مؤشر Delay End (تأجيل التوقف)، وتبدأ الساعة بالعد التنازلي حتى تصل إلى وقت الإنهاء.
٤. لإلغاء وظيفة Delay End (تأجيل التوقف)، اضغط على الزر On/Off ⏻ (تشغيل/إيقاف التشغيل)، ثم قم بتشغيل الغسالة مرة أخرى.



WD8602R8-02410Z_AR.indd 4 1/12/2009 11:07:22 AM

## الغسل للمرة الأولى

قبل غسيل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة دون ملابس.

للقيام بذلك:

١. اضغط الزر On/Off ⏻ (تشغيل/إيقاف التشغيل).
٢. ضع كمية قليلة من مسحوق الغسيل في الجزء المخصص له في ⓶ درج مسحوق الغسيل.
٣. قم بتزويد الغسالة بالماء.
٤. اضغط على زر Temp. (درجة الحرارة) بشكل متكرر حتى تظهر درجة الحرارة ٤٠°م.
٥. اضغط على الزر Start/Pause (تشغيل/توقف).

- يزيل ذلك أي ماء متبقي في الغسالة نتيجة للتشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

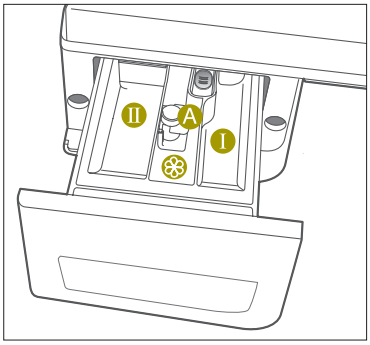


**الموزع ①** : مسحوق للغسيل الأولي أو النشا.
**الموزع ⓶** : مسحوق الغسيل لدورة الغسيل الرئيسية ومنعّم الأقمشة ومواد النقع ومادة التبييض ومواد إزالة الأوساخ.
**الموزع ❀** : المواد الإضافية، مثل مكون أو منعّم الأقمشة (لا تتجاوز حد الإدخال السفلي "A")

## وضع مسحوق الغسيل في الغسالة

١. اسحب درج مسحوق الغسيل.
٢. أضف مسحوق الغسيل في الحجيرة ⓶.
٣. أضف منعّم الأقمشة في الحجيرة ❀ (إذا كنت ترغب في ذلك).
٤. أضف مسحوق الغسيل الأولي في الحجيرة ① (إذا كنت ترغب في ذلك).

**تنبيه:**
يجب إذابة ملين الأقمشة المركز أو السميك بقليل من الماء قبل صبه في الموزع (لمنع إعاقة تدفق الماء.

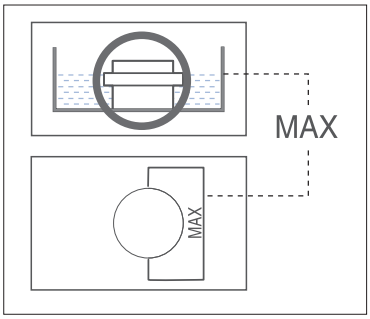




WD8602R8-02410Z_AR.indd 5 1/12/2009 11:07:23 AM

## تلميحات وأفكار مفيدة للغسيل

**فرز الملابس:** افرز الملابس حسب الخصائص التالية:

- **علامة العناية بنوع القماش:** افرز الملابس إلى ملابس قطنية وألياف ممزوجة واصطناعية وملابس حريرية وأصواف ورايون.
- **اللون:** قسم الملابس إلى ملابس بيضاء وملابس ملونة. اغسل الملابس الجديدة والملابس الملونة كل على حدة.
- **الحجم:** ضع الملابس من مختلف الأحجام والمقاسات في مرة واحدة لتحسين عملية الغسيل.
- **رقة الملمس:** اغسل الملابس الرقيقة على حدة باستخدام برنامج "رقيق" من أجل غسيل الصوف الخالص والستائر والملابس الحريرية. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

**تفريغ الجيوب:** قد تحدث العملات المعدنية ودبابيس الأمان وما شابه أضراراً بالأقمشة وحاوية الغسيل وخزان الماء.

**التثبيت بإحكام:** أغلق أي سوست أو أزرار أو خطافات بالملابس؛ كما يجب ربط الأحزمة أو الأشرطة المفكوكة.

**الغسيل الأولي للملابس القطنية:** تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة، أفضل نتائج الغسيل، ومن ثم فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم الغسيل الأولي بواسطة مسحوق الغسيل الذي يحتوي على البروتين.

**تحديد سعة حمل الملابس:** لا تتجاوز حمل الغسيل في الغسالة حيث يؤدي ذلك إلى عدم الحصول على النظافة التي تريدها. استخدم الجدول التالي لتحديد سعة الوزن لنوع الملابس التي تقوم بغسلها.

| نوع القماش | سعة الوزن |
|---|---|
| Cotton/Coloureds (قطن/ملابس ملونة) | ٦,٥ كجم |
| Synthetics (اصطناعي) | ٣,٠ كجم |
| Delicate Fabrics (ملابس رقيقة) | ٢,٥ كجم |
| Hand Wash For Wool (الغسيل اليدوي للصوف) | ٢,٠ كجم |

**تلميحات حول مسحوق الغسيل:** يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (cotton (قطن) أو synthetics (اصطناعي) أو delicates items (الملابس الرقيقة) أو Hand Wash For Wool (الغسيل اليدوي للصوف)، والألوان ودرجة حرارة الماء ودرجة الاتساخ ونوعه. استخدم دوماً مسحوق الغسيل ذي "الرغوة القليلة" والذيُ صمم خصيصاً للغسالات الأوتوماتيكية. اتبع توصيات الشركة المصنعة لمسحوق الغسيل على أساس وزن الملابس ودرجة الاتساخ وما إذا كان الماء عسراً في منطقتك. إذا لم تكن تعرف ما إذا كان الماء عسراً أم لا في منطقتك، اتصل بمصلحة الماء.

**ملاحظة:** أحفظ مسحوق الغسيل والإضافات في مكان آمن وجاف بعيداً عن متناول الأطفال.



WD8602R8-02410Z_AR.indd 6 1/12/2009 11:07:23 AM

## تصريف الماء من الغسالة عند الطوارئ

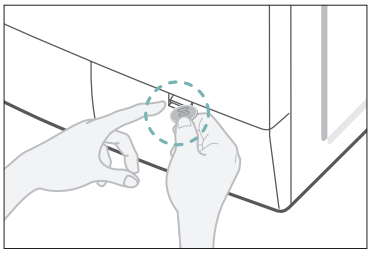

١. افصل الغسالة من مصدر الطاقة.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

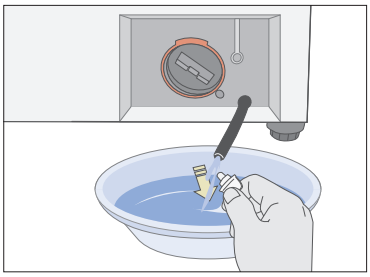

٣. فُك غطاء تصريف الطوارئ عن طريق اللف لليسار. أمسك الغطاء من نهاية أنبوب تصريف الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.
٤. اسمح بتصريف الماء بأكمله ليتدفق في وعاء.
٥. أعد إدخال أنبوب التصريف وثبت الغطاء مرة أخرى.
٦. أعد غطاء المصفاة إلى مكانه.

## إصلاح جهاز غسالة متجمد

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. صب الماء الدافئ على صنبور الماء لإرخاء خرطوم توريد الماء وفصله.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يجري كما ينبغي.

## تنظيف الأسطح الخارجية

١. امسح الأسطح الخارجية لجهاز الغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.



WD8602R8-02410Z_AR.indd 1 1/12/2009 11:07:24 AM

## تنظيف درج مسحوق الغسيل والموضع الداخلي

١. اضغط ذراع الإرخاء الموجودة في داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الغطاء من حجيرة ⊛.
٣. اغسل كل القطع بالماء الجاري.
٤. نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
٥. أعد الغطاء (بدفعه بإحكام) إلى مكانه. وأعد القاسم الخاص بسائل مسحوق الغسيل إلى مكانه في الدرج.
٦. أعد الدرج إلى مكانه.
٧. شغّل برنامج الشطف دون وضع أي غسيل في الحاوية.

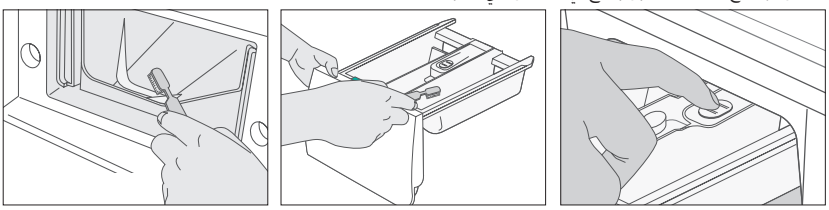

## تنظيف مصفاة المخلفات

نظف المصفاة من المخلفات ٥ أو ٦ مرات في السنة، أو عند ظهور رسالة الخطأ التالية على الشاشة:

١. افتح غطاء المصفاة. راجع الجزء "تصريف الماء من الغسالة عند الطوارئ" في صفحة C-١.
٢. قم بإرخاء غطاء التصريف عند الطوارئ بتدويره إلى اليسار لصرف الماء من الجهاز.
راجع الجزء "تصريف الماء من الغسالة عند الطوارئ" في صفحة C-١.
٣. فك غطاء المصفاة واسحبه إلى الخارج.
٤. اغسل أية أوساخ أو مواد أخرى عالقة في المصفاة. تأكد أن مروحة مضخة تصريف الماء الموجودة خلف المصفاة غير مسدودة. أعد مقدمة المصفاة إلى مكانها.

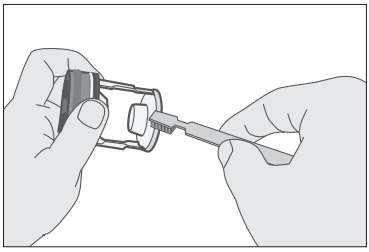

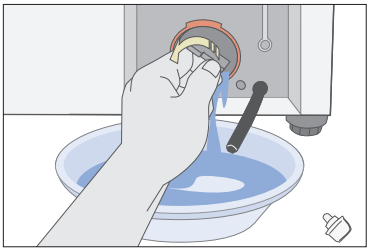

٥. أعد غطاء المصفاة إلى مكانه.



WD8602R8-02410Z_AR.indd 2 1/12/2009 11:07:25 AM

## تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة واحدة في السنة على الأقل، أو عند مشاهدة رسالة الخطأ التالية على الشاشة:

**للقيام بذلك:**

١. أغلق صنبور الماء المتصل بالغسالة.
٢. افصل الخرطوم عن الجانب الخلفي من الغسالة.
٣. بواسطة زوج من الزردية، اسحب المصفاة المشبكة إلى الخارج من طرف الخرطوم بلطف واشطفها بالماء حتى تصبح نظيفة. نظف كذلك الجزأين الداخلي والخارجي للوصلة.

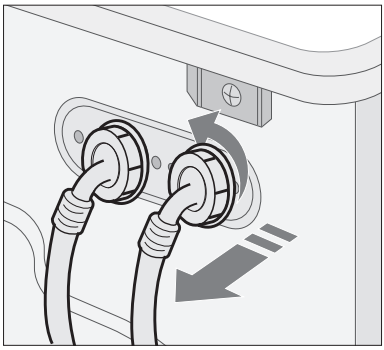

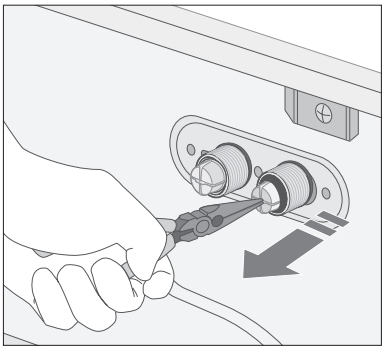

٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم في الغسالة مرة أخرى.
٦. افتح صنبور الماء وتأكد من عدم ترسب الماء في التوصيلات.



WD8602R8-02410Z_AR.indd 3 1/12/2009 11:07:26 AM

## المشاكل والحلول

### الغسالة لا تعمل

- تأكد من إغلاق الباب بإحكام.
- تأكد من توصيل قابس الجهاز بمصدر التيار الكهربي.
- تأكد من فتح صنبور الماء.
- تأكد من الضغط على الزر Start/Pause (تشغيل/توقف).

### لا يتم توريد الماء أو يتم توريد كمية غير كافية منه

- تأكد من فتح صنبور الماء.
- تأكد أن خرطوم توريد الماء غير متجمد.
- تأكد من عدم انثناء خرطوم توريد الماء.
- تأكد أن المصفاة الموجودة في خرطوم توريد الماء غير مسدودة.

### يبقى مسحوق الغسيل في الدرج بعد اكتمال برنامج الغسيل

- تأكد من تشغيل الغسالة بضغط ماء كاف.
- ضع مسحوق الغسيل في الأجزاء الداخلية لدرج مسحوق الغسيل (بعيداً عن الحواف الخارجية).

### تهتز الغسالة أو تحدث صوتاً مرتفعاً

- تأكد من تركيب الغسالة على أرض مستوية. إذا كانت الأرض غير مستوية، اضبط قدم الغسالة حتى تستوي على الأرضية.
- تأكد من إزالة مسامير الشحن.
- تأكد من عدم ملامسة الغسالة لأي شيء آخر.
- تأكد من توزيع وزن الملابس الموجودة في الغسالة.

### لا يتم تصريف الماء من الغسالة و/أو لا تقم بعملية التنشيف

- تأكد من عدم تعرض خرطوم التصريف لضغط أو انثناء.
- تأكد أن المصفاة الشبكية في خرطوم الماء غير مسدودة.

### يتعذر فتح الباب

١. افصل القابس من منفذ التيار الكهربائي.
٢. قم بإزالة الماء من جهاز الغسالة.
٣. افتح غطاء المصفاة باستخدام قطعة معدنية.
٤. حدد مكان العلامة البلاستيك البرتقالية اللون واسحب لفتح الباب.

## فهم رسائل الخطأ

| الخطأ المعروض على الشاشة | الحل |
|---|---|
| dE2 | • أغلق الباب. |
| 4E | • تأكد من أن صنبور الماء مفتوح.<br>• تأكد من ضغط الماء. |
| 5E | • نظف مصفاة المخلفات.<br>• تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة. |
| UE | • وضع الملابس غير متوازن: فك أي تشابك بين الملابس.<br>في حالة غسيل قطعة واحدة من الملابس، مثل برنس حمام أو جينز، قد لا تكون نتيجة التجفيف النهائي مرضية، وتظهر رسالة خطأ "UE" في إطار العرض. |
| cE / 3E | • اتصل بخدمة ما بعد البيع. |
| HOT | • يتم عرضها في حالة عدم فتح الباب بسبب درجة الحرارة العالية. |

**قبل الاتصال بمركز خدمة ما بعد البيع:**

١. حاول حل المشكلة (راجع "استكشاف الأخطاء وإصلاحها" في هذه الصفحة).
٢. أعد تشغيل البرنامج لمعرفة ما إذا كان سيتكرر ظهور الخطأ مرة أخرى.
٣. إذا استمر الخطأ، اتصل بمركز خدمة ما بعد البيع واشرح المشكلة.



WD8602R8-02410Z_AR.indd 1 1/12/2009 11:07:26 AM

# جدول الدورات

(* حسب اختيار المستخدم)

| الدورات | أقصى وزن (بالكجم) | مسحوق الغسيل والمواد الإضافية | | | درجة الحرارة (°م) | سرعة التنشيف (القصوى) لفة في الدقيقة | تأجيل التوقف | دورة الغسيل (بالدقيقة) |
|---|---|---|---|---|---|---|---|---|
| | | الغسيل الأولي | غسيل | منعّم القماش | القصوى | | | |
| Cotton (قطن) | ٦,٥ | * | نعم | * | ٩٥ | ١٢٠٠ | * | ٨٩ |
| Coloureds (ملابس ملونة) | ٦,٥ | * | نعم | * | ٦٠ | ١٢٠٠ | * | ٩٧ |
| Synthetics (اصطناعي) | ٣,٠ | * | نعم | * | ٦٠ | ١٠٠٠ | * | ٦٩ |
| Delicates Fabrics (ملابس رقيقة) | ٢,٥ | – | نعم | * | ٤٠ | ٨٠٠ | * | ٥٢ |
| Hand Wash For Wool (الغسيل اليدوي للصوف) | ٢,٠ | – | نعم | * | ٤٠ | ٨٠٠ | * | ٣٩ |
| Jeans (جينز) | ٢,٠ | – | نعم | * | ٤٠ | ٨٠٠ | * | ٥٩ |
| Quick (سريع) | ٣,٠ | – | نعم | * | ٦٠ | ١٢٠٠ | * | ٢٧ |

| الدورة | نوع الغسيل |
|---|---|
| Cotton (قطن) | الملابس القطنية وأغطية السرير والمفارش الكتانية والملابس الداخلية والمناشف والقمصان الخ. متوسطة أو خفيفة الاتساخ. |
| Coloureds (ملابس ملونة) | الملابس القطنية وأغطية السرير والمفارش الكتانية، والملابس الداخلية والمناشف والقمصان متوسطة أو خفيفة الاتساخ...الخ |
| Synthetics (اصطناعي) | البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى. |
| Delicates Fabrics (ملابس رقيقة) | الستائر والفساتين والتنورات والقمصان والبلوزات الرقيقة. |
| Hand Wash For Wool (الغسيل اليدوي للصوف) | الملابس الصوفية القابلة للغسيل في جهاز الغسالة فقط والتي تحمل علامة الصوف الخالص الجديد. |
| Quick (سريع) | الملابس القطنية خفيفة الاتساخ والبلوزات والقمصان الكتانية والملابس الوبرية الملونة الغامقة والملابس الكتانية الملونة الخامات الكتانية والجينز إلخ. |

١. تم قياس بيانات مدد البرامج وفقاً للظروف المبينة في Standard IEC 60456 / EN 60456.
٢. قد يختلف الاستهلاك في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة حرارتها. وكمية الغسيل ونوعه.



WD8602R8-02410Z_AR.indd 1 1/12/2009 11:07:26 AM

# جـدول الـدورات

(* حسب اختيار المستخدم)

| الدورة | أقصى وزن (بالكجم) | مسحوق الغسيل والمواد الإضافية | | | درجة الحرارة (°م) | سرعة التنشيف (القصوى) لفة في الدقيقة | تأجيل التوقف | دورة الغسيل (بالدقيقة) |
|---|---|---|---|---|---|---|---|---|
| | | الغسيل الأولي | غسيل | منعّم القماش | القصوى | | | |
| Drying (تجفيف) | ٣,٠ | - | - | - | - | - | * | ١٣٠ |
| Heavy Soil (أوساخ كثيرة) | ٦,٥ | * | نعم | * | ٦٠ | ١٢٠٠ | * | ١٠٨ |
| Mixed Load (حمولة متنوعة) | ٢,٥ | - | نعم | * | ٦٠ | ٨٠٠ | * | ٧٥ |
| Calm Wash (غسيل هادئ) | ٣,٠ | - | نعم | * | ٤٠ | - | * | ٩٥ |

| الدورة | نوع الغسيل |
|---|---|
| Heavy Soil (أوساخ كثيرة) | الملابس القطنية وأغطية السرير والمفارش الكتانية، والملابس الداخلية والمناشف والقمصان المبقعة أو كثيرة الاتساخ...الخ |
| Mixed Load (حمولة متنوعة) | خليط من الملابس القطنية خفيفة الاتساخ والألياف الاصطناعية. |
| Calm Wash (غسيل هادئ) | مستوى صوت منخفض للغاية خلال دورة الغسيل بأكملها وانتهاء مدة انتظار الشطف. الملابس القطنية وأغطية السرير والمفارش الكتانية والملابس الداخلية والمناشف والقمصان. |



WD8602R8-02410Z_AR.indd 2 1/12/2009 11:07:26 AM

# الملحق

## جدول العناية بالأقمشة

| | | | |
|---|---|---|---|
| | مواد مقاومة | | يمكن الكي عند ١٠٠ °م بحد أقصى |
| | أقمشة ناعمة | | يحظر الكي |
| | يمكن الغسيل عند ٩٥ °م | | يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة |
|  | يمكن الغسيل عند ٦٠ °م |  | التنظيف الجاف بالبروكلوريد أو الكحول النقي أو R113 فقط |
| | يمكن الغسيل عند ٤٠ °م | | التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط |
| | يمكن الغسيل عند ٣٠ °م | | يحظر استخدام التنظيف الجاف |
| | تغسل باليد | | تجفف وهي مفرودة |
| | تنظيف جاف فقط | | يمكن تعليقها التجفف |
| | يمكن استخدام مادة تبييض مع الماء البارد | | تجفيف الملابس وهي معلقة على حمالة |
| | يحظر استخدام مادة تبييض | | تجفيف بالتدوير، حرارة عادية |
| | يمكن الكي عند ٢٠٠ °م بحد أقصى | | تجفيف بالتدوير، حرارة خفيفة |
| | يمكن الكي عند ١٥٠ °م بحد أقصى | | يحظر تجفيفها بالتدوير |

## التنبيهات الكهربية

لتقليل احتمال التعرض لأخطار الحرائق والصدمات الكهربية وغيرها من الإصابات، ضع احتياطات السلامة التالية في الاعتبار:

- شغّل الجهاز فقط من نوع مصدر الطاقة المشار إليه على الجهاز. إذا لم تكن متأكداً من نوع الطاقة الكهربائية في منزلك، استشر مورد الجهاز أو شركة الطاقة المحلية.
- استخدم مخرج التيار الذي تم توصيله الأرضي أو تقطيبه. من أجل سلامتك، تم تزويد هذا الجهاز بقابس تيار متردد متقطب ذو طرف أعرض من الآخر. يناسب هذا القابس منفذ التيار الكهربي باتجاه واحد فقط. إذا لم تستطع إدخال القابس بأكمله في منفذ التيار الكهربي، جرب إدخال القابس بشكل عكسي. إذا كان القابس غير ملائم لمنفذ التيار، اتصل بفني كهربائي لتبديل منفذ التيار.
- احم سلك الطاقة. لا بد من وضع سلك التيار الكهربي بعيداً عن وطء الأقدام وتجنب وضع أية أجسام عليه أو فوقه. توخ المزيد من الحذر عند التعامل مع الأسلاك المتصلة بالقابس ومصدر التيار ونقطة خروج السلك من الجهاز.
- تجنب زيادة الضغط على منفذ التيار الكهربي أو الأسلاك الإضافية. يمكن أن ينتج عن التحميل الزائد حريقاً أو صدمة كهربية.



WD8602R8-02410Z_AR.indd 1 1/12/2009 11:07:29 AM

# الملحق

## حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسل عند الحاجة فقط.
- وفّر الماء والكهرباء من خلال غسيل أحمال ملابس كاملة فقط (تختلف الكمية وفقاً لدورة المستخدم).

## إعلان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية و EC directive 93/68 و EN Standard 60335.

## المواصفات

| النوع | | غسالة ملابس أمامية التحميل | |
|---|---|---|---|
| الأبعاد | | WD8602R8 | |
| | | العرض ٥٩٨ مم × العمق ٥٨٤ مم × الارتفاع ٨٤٤ مم | |
| ضغط الماء | | ٥٠ كيلوباسكال ~ ٨٠٠ كيلوباسكال | |
| كمية الماء | | ٧٨ لتر | |
| الوزن الصافي | | WD8602R8 | |
| | | ٧٨ كجم | |
| سعة الغسيل والتجفيف | غسيل | ٦,٥ كجم (ملابس جافة) | |
| | التجفيف | ٣,٠ كجم (ملابس جافة) | |
| استهلاك الطاقة | الطراز | WD8602R8 | |
| | الغسل | ٢٣٠ فولت | ١٥٠ وات |
| | الغسيل والتسخين | ٢٢٠ فولت | ٢٠٠٠ وات |
| | | ٢٤٠ فولت | ٢٤٠٠ وات |
| | التجفيف | ٢٢٠ فولت | ٢٠٠٠ وات |
| | | ٢٤٠ فولت | ٢٤٠٠ وات |
| | الضخ | ٣٤ وات | |
| دورة التنشيف | الطراز | WD8602R8 | |
| وزن العبوة | الغلاف الورقي | ٢,٥ كجم | |
| | غلاف بلاستيكي | ١,٠ كجم | |
| الحمولة | الطراز | WD8602R8 | |
| | دورة في الدقيقة | ١٢٠٠ | |



WD8602R8-02410Z_AR.indd 2 1/12/2009 11:07:30 AM

هل لديك أسئلة أو تعليقات؟

| البلد | اتصل بـ | أو قم بزيارة موقعنا على الإنترنت على |
|---|---|---|
| U.A.E | 800-SAMSUNG (726-7864)<br>8000-4726 | www.samsung.com/ae |